

A password must be entered before you can assign a security code to your handset.

Follow these steps to assign a Security Code to the handset.

1. Press the Options button
2. Press SHOW
3. Press NEXT until the display shows **4. Set S.S. Code:**
4. Press CHANGE to assign a security code to the handset. The display shows **Enter Password**
5. Enter the six-digit password (default 000000)
6. Press OK. The display shows **Press 6 digits**
7. Enter the six-digit Security Code that was assigned to the base you are connecting to
8. Press OK to accept the code. The display shows **4. Set S.S. Code:**

If you are assigning a handset to an existing base, your handset is now connected to the system.

If you are assigning the first handset to a **new base station** (which has no security code), continue with the following steps:

9. When the display show **4. Set S.S. Code:**, press NEXT to get ready to send the security code to the base. The display shows **5. Send S.S. Code.**
10. Unplug the AC power adapter connected to the base, and plug it back in again
11. Within 15 seconds, press and hold the OK for five seconds to send the security code to the base. The display show **Send Ok!** and you hear a beep when the transfer is successful. NOTE: If the Security Code transfer fails, **Send Error!** Displays. To correct this, repeat steps 9 and 10.
12. Press the Options button. The date and time displays **Finish**