

## Using the buttons under the display


The three display buttons are used both for telephone features and programming, but what each button does depends on what the display shows. Some display instructions that you may see when making changes on the system are OK, CHANGE or COPY. In this guide, display button instructions are underlined.

### The programming overlay


When you begin programming, a group of buttons on the telephone become the buttons for moving through programming headings and settings. The programming overlay is a paper cutout (found at the front of this guide) that shows the directions the four buttons take you when programming.

#### T7316 TELEPHONE SET OVERLAY

### Business Series Terminal programming overlay

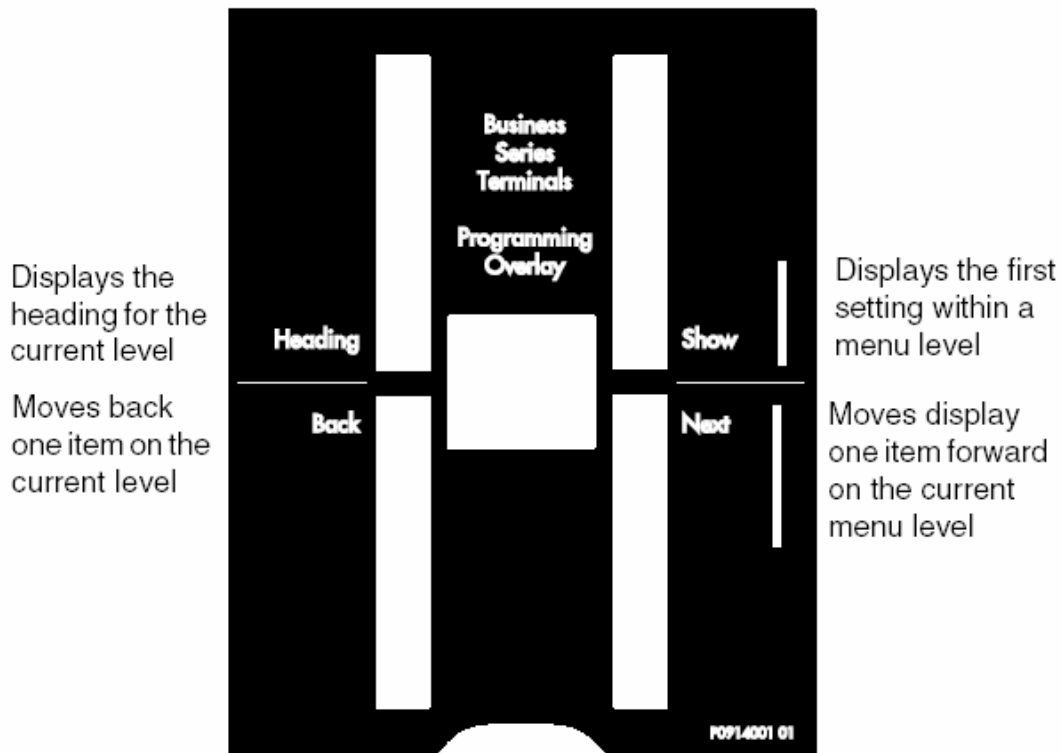

### Placing the programming overlay on a Business Series Terminal

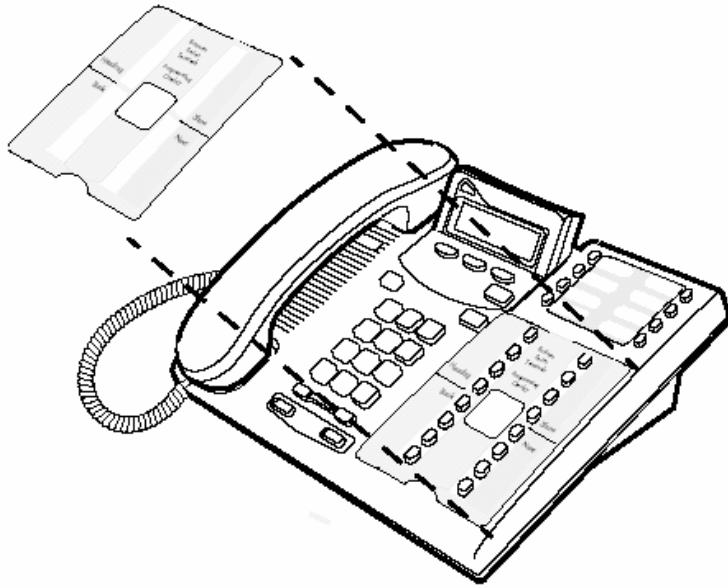

**Placing the programming overlay**

