

Changing the time and date on the display

Jan 1 12:00am Press **☞**.

Feature: Press *** * 8 4 6 9** (which is the same as *** * T I M E**).

Password: Press **2 2 7 4 2** (**B A S I C**) or **2 3 6 4 6** (**A D M I N**)

RETRY

In this example, you are changing the time to 1:30 p.m.

Hour:01 Press CHANGE.

NEXT CHANGE

Hour:___ Press the dialpad buttons to enter the hour. Use two digits for all hours. The clock on the display shows either one or two digits.

CANCL

AM The display prompts you to choose a.m. or p.m. Press CHANGE and PK to select p.m.

OK CHANGE

Hour:01 Press NEXT.

NEXT CHANGE

Minutes:00 Press CHANGE.

NEXT CHANGE

Minutes:___ Press the dialpad buttons to enter the minutes.

CANCL

If you are only change the time and not the date, press RLS (Release Button)

In this example, you are changing the date to July 15, 2003.

Minutes:00 Press NEXT.

NEXT CHANGE

Year:00 Press CHANGE.

NEXT CHANGE

Year:___ Press the dialpad buttons to enter the year.

CANCL

Year:03 Press NEXT.

NEXT CHANGE

Month:01 Press CHANGE.

NEXT CHANGE

Month:___ Press the dialpad buttons to enter the month.

CANCL

Use numbers for the months: 01 is January; 12 is December.