

Turning Outbound Transfer on or off

You can turn Outbound Transfer on or off at any time after you set it up. Turning Outbound Transfer off does not affect any of its assigned parameters.

To turn Outbound Transfer on or off

- 1 Press **[*] 9 8 1**.
Follow the voice prompts or the display button options on your telephone to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **[8] 0** to open the Mailbox Options
- Press **[9]**
- Press **[3]** to open the Outbound Transfer menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[8]** to open the Outbound Transfer menu
- Go to step 3

```

Outbound xfr
ADMIN          SELECT
  
```

- 3 Press **SELECT** or **[2]** to access Outbound Transfer.

```

Transfer: off
CHNG          QUIT
  
```

- 4 Press **CHNG** or **[1]** to turn Outbound Transfer on.
Press **CHNG** again to turn Outbound Transfer off.

```

Transfer: on
CHNG          QUIT
  
```

- 5 Press **QUIT** or **[*]**.

- 6 Press **[END]** to end the session.